 




HearPlus 313ci

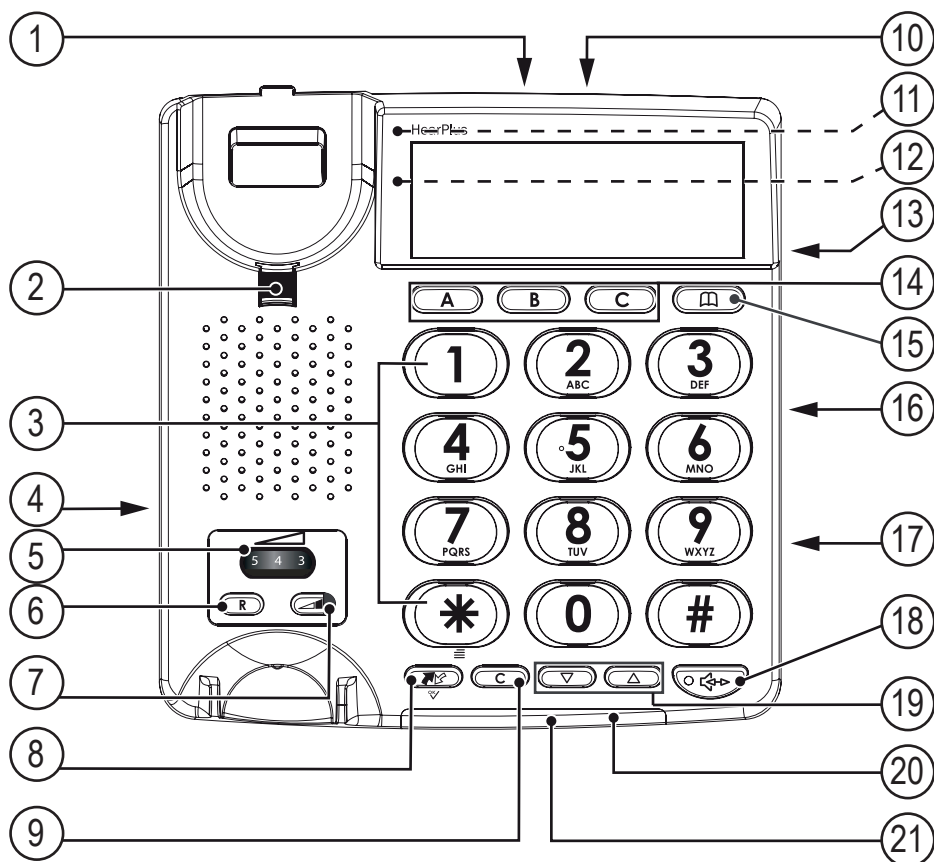

English

- | | |
|--------------------------|------------------------|
| 1. Telephone line socket | 12. Ring melody |
| 2. Handset hook | 13. Ring volume |
| 3. Keypad | 14. Speed dial keys |
| 4. Handset cord socket | 15. Phone book |
| 5. Handset volume | 16. Handset tone |
| 6. Recall | 17. Speaker volume |
| 7. Volume boost | 18. Speakerphone |
| 8. Call memory / OK | 19. UP/DOWN |
| 9. Delete | 20. New call indicator |
| 10. Mains adapter socket | 21. Ringer indicator |
| 11. Ring tone | |

Description

Doro HearPlus 313ci

This product can be used as a desktop or wall-mounted telephone. Handset tone control, volume boost, enhanced ring volume and visual call indication make the telephone well suited for people with hearing difficulties.



The extra-large keypad and easy to read display with large characters make the telephone easy to use even with impaired eyesight.

The built-in phonebook can store up to 30 names and numbers. Three one touch memory keys can be programmed for frequently used numbers or emergency numbers. A call memory logs the 15 most recently incoming and outgoing calls.

A speakerphone function allows you to talk hands-free with the simple press of a button.

Installation

Connection

1. Connect the curly cord to the handset and to the socket marked  on the telephone.
2. Connect the telephone line cord to a network wall socket and to the  socket on the back of the telephone.
3. Connect the mains adapter to the mains power wall socket and to the DC 9V socket on the telephone.
4. Lift the handset and listen for the dial tone.

Batteries



Four AA alkaline batteries are needed for the call memory and speakerphone in the event of a power cut. When **BATT. LOW** is displayed, replace all 4 batteries. Use only AA alkaline batteries of good quality (not included).

Note!

Before installing or changing the batteries, make sure that the telephone is not connected to the telephone network.






1. Remove the battery cover and insert the batteries ensuring correct battery polarity is observed.
2. Replace the battery cover and reconnect the telephone line cord.

Basic setup





Before using the telephone the first time, the following basic settings should be made. After confirming a setting, the next setting is automatically displayed. To skip to the next setting, press  .

The phone will return to standby mode after 30 seconds of inactivity or when pressing **C/←**.


On first setup the display clock will show 00:00.

1. Press and hold  for about 5 seconds until the hour flashes.
2. Use  /  to change the value and confirm with  .
3. Repeat steps 1–2 to set the minutes, day and month.


ENGLISH is displayed.

Use  /  to select the desired language, then confirm with  .


-2- CONTRAST

Use \triangle / ∇ to set the display contrast setting (1–4), and confirm with .

KEYT. ON


Use \triangle / ∇ to set key tone ON/OFF, and confirm with .

-100- FLASH

Use \triangle / ∇ to set the flash key time (100/300/600 ms) and confirm with .

The standard setting is 100 for most countries, 300 for France/Portugal, 600 for New Zealand.

LED OFF

Use \triangle / ∇ to enable/disable the LED indicator for new calls, and confirm with .

TONE

Use \triangle / ∇ to select either tone or pulse dialling mode, and confirm with .

Note!

If unsure of which mode to use, select TONE as this works in most locations.

 
Wall mounting

The telephone can be wall mounted by using the included wall mount bracket and two screws (not included).


Warning!

Make sure that no cables, water pipes or gas pipes are located inside the wall before drilling into it.

1. Drill two holes in the wall, vertically 83 mm apart.
2. Insert the screws, allowing them to project ~5 mm out from the wall.
3. Unplug and remove the handset.
4. Fit the guide tabs (A) on the bracket into the slots (B) on the back of the telephone, then slide the bracket upwards until it snaps into place.

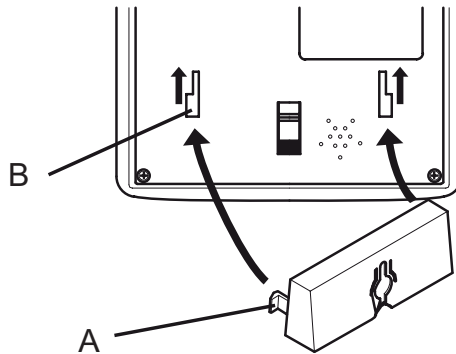

 5. Position the telephone so that the screws on the wall fit into the slots in the bracket, then slide the telephone downwards until it is hanging on the screws.
6. Remove the handset hook (C) by pushing it upwards, and insert it in the reversed position so that the small tab (D) protrudes. The hook will now keep the handset in the cradle when the phone is wall mounted.

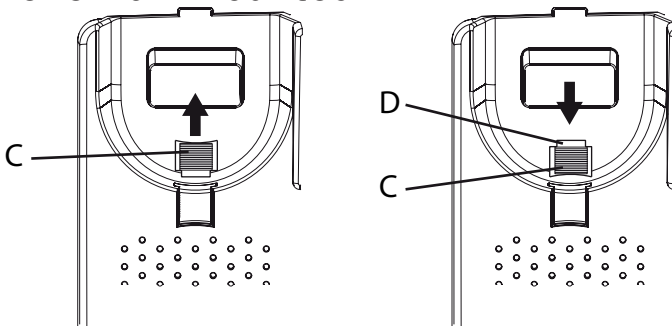

7. Reconnect the handset and place it in the cradle.

Note!

If the phone is to be used as a desktop phone again, remember to reverse the position of the handset hook.

Operation

Making a call



Normal dialling

1. Lift the handset.
2. Dial the number. Hang up the handset to terminate the call.

Speakerphone


Note!

The speakerphone only works when batteries are installed or mains adapter is connected.



1. Press  to activate the speakerphone. The LED next to the key will light up.
2. Dial the number. Press  again to terminate the call.

Lift the handset to switch from speaker to handset during a call.







Pre-dialling

1. Enter the number. Press **C/←** to delete the last entered digit.
2. Lift the handset or press  to dial.


Quick redial

1. Lift the handset or press .
2. Press  to redial the last dialled number.





Dialling numbers in the call memory

1. Press  to display the most recent call.
2. Use  /  to scroll through the last 15 incoming and outgoing calls.
 = Incoming call
 = Outgoing call
3. Lift the handset or press  to dial the displayed number.


Speed dial (one-touch dialling)

1. Press one of the speed dialling keys A/B/C. The stored telephone number is displayed.
2. Lift the handset or press  to dial.

Dialling numbers in the phone book

1. Press  to open the phone book.
2. Use  /  to browse through the phone book, or enter the first character in the name to quickly find an entry (see *Keypad characters*).
3. Lift the handset or press  to dial.

Answering

Lift the handset to answer an incoming call, or press  to answer using the speakerphone.

Ring signal

The ring melody and tone can be adjusted using the sliders on the bottom of the telephone.

♪ ... ♪ Ring melody

♪ . . . ♪ Ring tone

The ring volume is adjusted with the switch on the right side of the telephone.

Volume control

The speaker volume is adjusted with a slider on the right side of the telephone.

The handset volume control is located under the handset.

Keypad characters







1	[Space] + & - / X 1
2	A B C Å Ä Æ æ å ä ß 2 Γ
3	D E F ë 3 Δ
4	G H I Ĩ 4 Θ
5	J K L 5 Ł
6	M N O Ñ ñ Ö ø ö 6 ≡
7	P Q R S 7 Π Σ
8	T U V Ü ü 8
9	W X Y Z 9 Φ Ψ Ω
*	` @ () * < >
0	, . : ? = 0
#	\$ _ % ! #

Additional functions




Phone book

The phone book can store up to 30 entries. When the memory is full, ----100% is displayed.








 




Storing numbers in the phone book

1. Press and hold  until a blinking cursor is shown.
2. Enter a telephone number (up to 22 digits). Use / to move the cursor and **C/←** to erase if needed. Use  to insert a pause in the number.
3. Press  to confirm. A blinking cursor will be shown on the second line on the display.
4. Enter a name (up to 9 characters) for the number to be stored (see *Keypad characters*).
5. Press  to confirm. **OK** is now displayed.
6. Repeat steps 1–6 to store another number, or press and hold **C/←** to exit.




 





Deleting numbers from the phone book

1. Press  to open the phone book.
2. Use / to browse through the phone book, or enter the first character to quickly find an entry.
3. Press and hold **C/←** to delete the entry

Editing numbers in the phone book

1. Press  to open the phone book.
2. Use / to browse through the phone book, or enter the first character to quickly find an entry.
3. Press and hold  until the blinking cursor appears.
4. Use / to move the cursor, and use / and the keypad to erase and enter new data.
5. Press   to confirm. The cursor will move to the second line.
6. Repeat step 4 to edit the name/description.
7. Press   to confirm. OK is displayed.

Storing speed dial numbers

1. Press and hold one of the speed dialling keys A/B/C until a blinking cursor is shown on the first line on the display.
2. Enter a telephone number (up to 22 digits) using the keypad. Use / to move the cursor and / to erase if needed.
Use  to insert a pause in the number.
3. Press   to confirm. A blinking cursor will be shown on the second line on the display.
4. Enter a name (up to 9 characters) for the number to be stored (see *Keypad characters*).
5. Press   to confirm. OK is displayed.
6. Repeat steps 1–5 to store numbers for the other speed dialling keys.

Deleting speed dial numbers

Speed dial numbers can not be deleted, they can only be replaced by storing a new number.



Caller ID and call memory

Caller ID allows you to see who is calling before you answer and to see who has called in your absence.

Note!




The Caller ID function must be subscribed.

Please contact your network operator for more information.

The call memory will store the last 15 incoming and 15 outgoing calls. On the display, incoming (answered and unanswered) calls are indicated with  and outgoing calls with .

If the Call Indicator function is active, a blinking light indicates that an unanswered call has been received since the call memory was last checked.





Browsing the call memory

1. Press  then  /  to scroll through the call memory. The number and time of each call will be displayed. For calls older than 24 hours, the date of the call is displayed instead of the time.
2. Press **C/←** to exit the call memory.

Deleting numbers from the call memory

1. Press  then  /  to scroll through the call memory.
2. Press and hold **C/←** to delete the selected entry.

 
Copying call memory entries to the phone book

1. Press  then  /  to scroll through the call memory.
2. Press and hold  until OK is displayed. The selected number has now been saved to the phone book.



Call timer

The display shows the current time when in standby mode. During a call the display will show a call timer instead, indicating the duration of the call. The call duration is displayed for 5 seconds after the call is terminated.

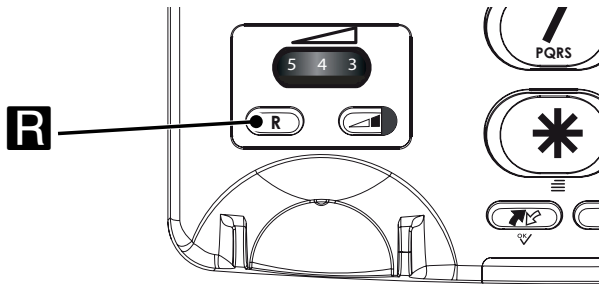Recall key (R)



Press the **R** key followed by the extension number to transfer a call when connected to a PBX system.

Additional network services may be accessible by using the **R**,  and  keys. Please contact your network operator for more information about the available network services.

Hearing aid

This telephone is hearing aid compatible. Select the **T** mode on your hearing aid to enable this feature.

Volume Boost

The handset volume can be raised another 10 dB by pressing the Volume Boost key while talking. The LED indicator on the key will light up. Press the key again or terminate the call to turn off Volume Boost.

Warning!

The handset volume can be very loud with this setting. Volume boost should only be used by persons with impaired hearing.

Handset tone

The speech tone (bass/treble) can be adjusted for better clarity using the handset tone control on the right side of the phone. PLEASE NOTE! Only works when Boost is active.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- The mains socket-outlet shall be installed near the equipment and shall be easily accessible.

The advice above applies to the unit, battery, mains adapter and other accessories. If the telephone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty and technical data

This product is guaranteed for a period of 24 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

Use only AA Alkaline batteries of good quality.

NOTE! This guarantee does not affect your legal (statutory) rights under your applicable national laws relating to the sale of consumer products.

Specifications

Size: 175 mm x 175 mm x 60 mm

Weight: 750 g (including batteries)

Battery: 4 x 1.5 V AA Alkaline batteries

Declaration of Conformity

Doro hereby declares that **Doro HearPlus 313ci** conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS).

A copy of the Declaration of Conformity is available at www.doro.com/dofc

UK

Technical support is available by email on tech@doro-uk.com

Premium rate telephone number: 0905 895 0854, calls cost 50 pence per minute (price correct at the time of publication).

You can also contact us in writing (regarding any Spares or Technical query):

Customer Services

Doro UK Ltd
1 High Street
Chalfont St Peter
Buckinghamshire
SL9 9QE

Further contact details are available on our website: www.doro-uk.com.

English

Version 1.0

www.doro.com

